

# 取扱説明書 OPERATOR'S MANUAL




使用電源 Power Supply	DC+5V DC+12V
CRT画面 Monitor	横画面 Horizontal Screen

**SYSTEM**  
**V VIDEO SYSTEM Co.,Ltd.**

## CONNECTOR DIAGRAM

SOLDER SIDE(半田面)			COMPONENT SIDE(部品面)
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
AUDIO (GND)	M	11	AUDIO (+)
VIDEO (GREEN)	N	12	VIDEO (RED)
VIDEO (SYNC)	P	13	VIDEO (BLUE)
SERVICE	R	14	VIDEO (GND)
	S	15	
COIN SW.2	T	16	COIN SW.1
2-P START	U	17	1-P START
2-P UP	V	18	1-P UP
2-P DOWN	W	19	1-P DOWN
2-P LEFT	X	20	1-P LEFT
2-P RIGHT	Y	21	1-P RIGHT
2-P SW 1 BUTTON	Z	22	1-P SW 1 BUTTON
2-P SW 2 BUTTON	a	23	1-P SW 2 BUTTON
2-P SW 3 BUTTON	b	24	1-P SW 3 BUTTON
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

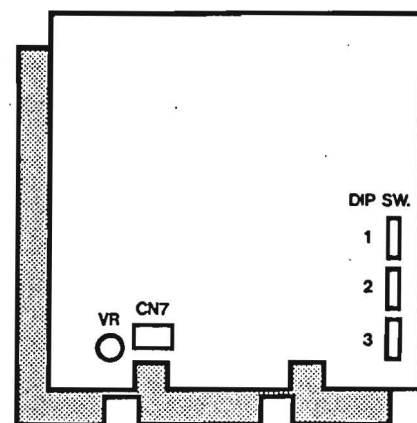


## 操作方法 HOW TO PLAY



□ボタン設定

□SETUP BUTTON

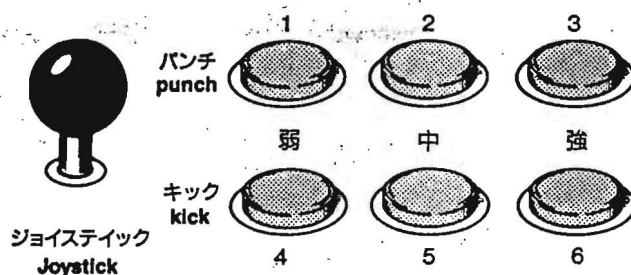

■8人勝ち抜けはエンディングです。

■After 8 players have been defeated, the game is over.


## ■付属ハーネス接続説明書 INSTRUCTIONS FOR THE 6-BUTTON HARNESS

コネクタは基板上のCN7に接続して下さい。

When using this PC board in a 6-button cabinet, you must attach the 6-button harness to the CN7 connector on the PC board.

当基板には6ボタン用にハーネスが付属されております。

Harness (shown in the diagram below) is included in the PCB kit.

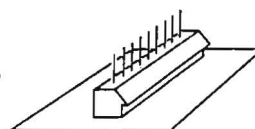

基板上のCN7コネクタにハーネスを接続する。  
Connect harness to the CN7 on the PC board.

## CN7 DIAGRAM (9Pin)

GND(黒色)	1	GND(BLACK)
GND(黒色)	2	GND(BLACK)
1P キック弱(紫色)	3	1-P SW 4 BUTTON(PURPLE)
1P キック中(灰色)	4	1-P SW 5 BUTTON(GRAY)
1P キック強(白色)	5	1-P SW 6 BUTTON(WHITE)
N.C.	6	N.C.
2P キック弱(橙色)	7	2-P SW 4 BUTTON(ORANGE)
2P キック中(緑色)	8	2-P SW 5 BUTTON(GREEN)
2P キック強(青色)	9	2-P SW 6 BUTTON(BLUE)

DIP SWITCH 1		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
コインスロット 共用 Coin slot 個別	One coin slot Separate coin slots	OFF ON							
コイン1 Coin-1	1COIN = 1CREDIT 2COINS = 1CREDIT 3COINS = 1CREDIT 1COIN = 2CREDITS 1COIN = 3CREDITS 1COIN = 4CREDITS 1COIN = 5CREDITS 1COIN = 6CREDITS		OFF ON OFF ON OFF ON OFF ON	OFF OFF ON OFF OFF ON ON ON	OFF OFF OFF ON ON ON ON ON				
コイン2 Coin-2	1COIN = 1CREDIT 2COINS = 1CREDIT 3COINS = 1CREDIT 1COIN = 2CREDITS 1COIN = 3CREDITS 1COIN = 4CREDITS 1COIN = 5CREDITS 1COIN = 6CREDITS					OFF ON OFF ON OFF ON OFF ON	OFF OFF ON ON OFF OFF ON ON	OFF OFF OFF ON ON ON ON ON	
CONTINUE COIN NORMAL (Start = 1 coin Continue = 1 coin) CONTINUE (Start = 2 coins Continue = 1 coin)									OFF ON

■コインスロットが共用の時は、CREDITの表示が1つで1P・2P共用です。

■コインスロットが個別の時は、基本的にCREDITの表示が2つで1P・2P独立のコインシューターを持つことになります。  
この時はコイン1の設定がコイン1とコイン2の両方に影響します。

■Continue CoinがCONTINUEの時は、DIP[2]～[7]の設定が無視されます。

☐ When there is only one coin slot, only one CREDIT display appears for both 1P and 2P

☐ When there are two separate coin slots, there are two CREDIT displays and two independent coin shooters, one for 1P and one for 2P.

The Coin-1 setup influences both Coin-1 and Coin-2.

☐ When Continue Coin CONTINUE position, DIP[2]～[7] setup ignored.

DIP SWITCH 2		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
画面反転 Flip Flop	NORMAL INVERT	OFF ON							
デモサウンド Demo-Sound	有り Yes 無し No		OFF ON						
フリープレイ Free play	OFF ON			OFF ON					
難易度 Difficulty	Normal Easy Hard Super				OFF ON OFF ON	OFF OFF ON ON			
テストモード Test Mode	OFF ON						OFF ON		
N.C.								OFF	OFF

DIP SWITCH 3		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
2人プレイ 2 players	2P 2CREDITS 2P 1CREDIT	OFF ON							
体力復活 Health Recovery	有り Yes 無し No		OFF ON						
N.C.				OFF	OFF	OFF	OFF	OFF	OFF

■2人プレイの設定

2P 1CREDIT → 1クレジットで2人プレイが可能です。

2P 2CREDITS → 2クレジットで2人プレイが可能です。

☐ Setup for 2 players

2P 1 CREDIT → With 1 CREDIT two players can play.

2P 2 CREDITS → With 2 CREDITS 2 players can play.